

GAME NO. 775

MAY 1979

MIDWAY'S **SPACE INVADERS** COCKTAIL TABLE MODEL **PARTS CATALOG**



MIDWAY MFG. CO.

A BALLY COMPANY

10750 WEST GRAND AVENUE
FRANKLIN PARK, ILLINOIS 60131
U.S.A.

PHONE: (312) 451-1360 CABLE ADDRESS: MIDCO TELEX NO.: 72-1596

TABLE OF CONTENTS

	Page No.
GENERAL INSTRUCTIONS	1—2
SWITCH ADJUSTMENTS	3
NO. 775 SPACE INVADERS COCKTAIL — PICTURE	4—6
ADDITIONAL PARTS LIST	7
GAME BOARD COMPONENTS LAYOUT	8

WARNING

THIS GAME MUST BE GROUNDED. FAILURE TO DO
SO MAY RESULT IN DESTRUCTION TO ELECTRONIC
COMPONENTS.

GENERAL INSTRUCTIONS FOR "SPACE INVADERS" COCKTAIL TABLE

Installation

1. Remove shipping cleats located on bottom of cabinet.
2. Install four (4) provided leg levelers to bottom of cabinet and level cabinet.
3. The power is controlled by a switch located on the bottom of the cabinet. Plug into A.C. only, 115 volts, 60 cycles. In low line areas (105 volts or less), a boost in the output voltage of the transformer may be obtained by removing the wire from the 115 volt tap of the transformer and rewiring it to the 105 volt position.

Voltage Control Pots

Located on Power Supply Board (P.C. A080-90400-H000) and are preset at the factory. These pots should not be tampered with unless the Distributor Service Department is contacted.


Master Volume Control

Located on Game Logic Board (P.C. A084-90700-D739) controls the volume of all sounds and may be varied as desired by rotating pot.

Adjustment Switches

Location on Game Logic Board (P.C. A084-90700-D739) and may be adjusted as indicated on separate instruction sheet in cabinet.

1. No. of Laser Bases per game: Adjustable 3 to 6.
2. Bonus Laser Base: Awarded at 1,000 or 1,500 points.

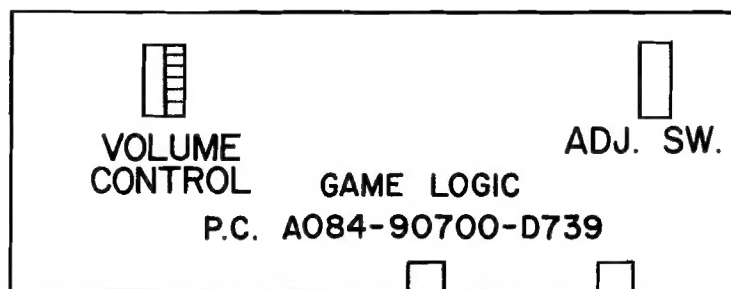

GENERAL INSTRUCTIONS FOR "SPACE INVADERS" COCKTAIL TABLE

Line Voltage Safety Switch


A line Voltage Safety Switch has been provided for your protection. It is located in the cabinet on the left side of the coin door. When the coin door is opened the circuit to the line voltage is interrupted. To restore power (when servicing), pull switch fully out.

To Service Game Logic Board

The Game Logic Board assembly is easily serviced by removing rear access door panel.

To Service Monitor

1. Open coin box door.
2. Release two clamps located above coin door opening. **CAUTION: NEVER RELEASE CLAMPS UNLESS THE LINE VOLTAGE IS INTERRUPTED VIA SAFETY SWITCH.**
3. Rotate top panel on its hinges to an upright position.
4. Place Monitor Support Bracket (located on left cabinet wall) in provided hole in monitor chasis.
5. To restore power to monitor, pull safety switch fully out.

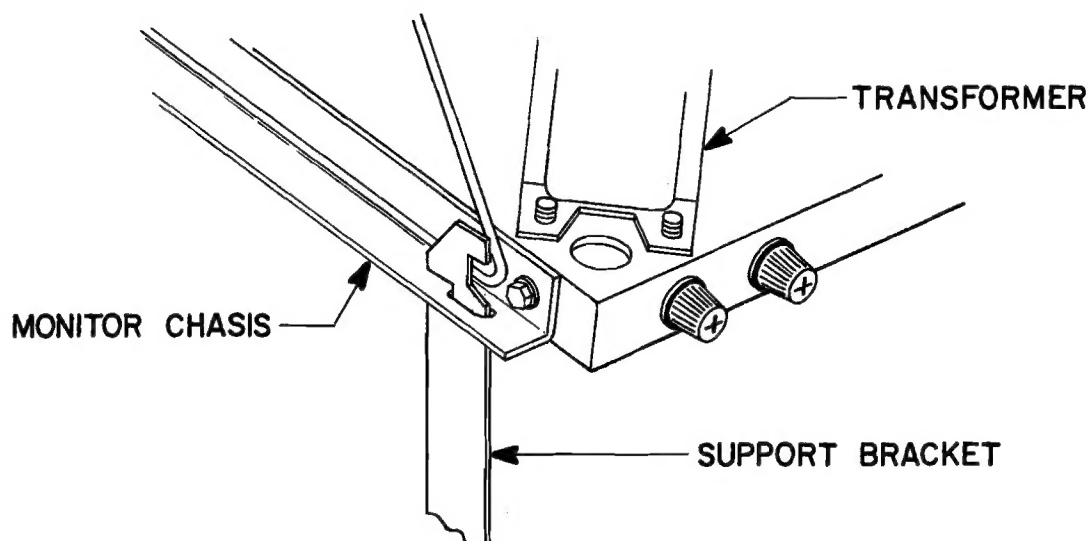


M051-00775-A012

ADJUSTMENT SWITCHES				
COIN INFORMATION DISPLAYED ON SCREEN	SW. 1			
	ON			
COIN INFORMATION IS NOT DISPLAYED ON SCREEN	OFF			
BONUS LASER BASE				
BONUS BASE AWARDED AT 1000 PTS.	SW. 2			
	OFF			
BONUS BASE AWARDED AT 1500 PTS.	ON			
NUMBER OF BASES PER GAME				
3 BASES 4 BASES 5 BASES 6 BASES	SW. 3	SW. 4		
	ON	ON		
	ON	OFF		
	OFF	ON		
	OFF	OFF		
GAME SELECTION (UPRIGHT-TABLE)				
UPRIGHT MODEL	SW. 5	SW. 6	SW. 7	SW. 8
	ON	ON	ON	ON
TABLE MODEL	OFF	OFF	OFF	OFF

M051-00775-A010

NO. 775 – SPACE INVADERS COCKTAIL – PICTURE

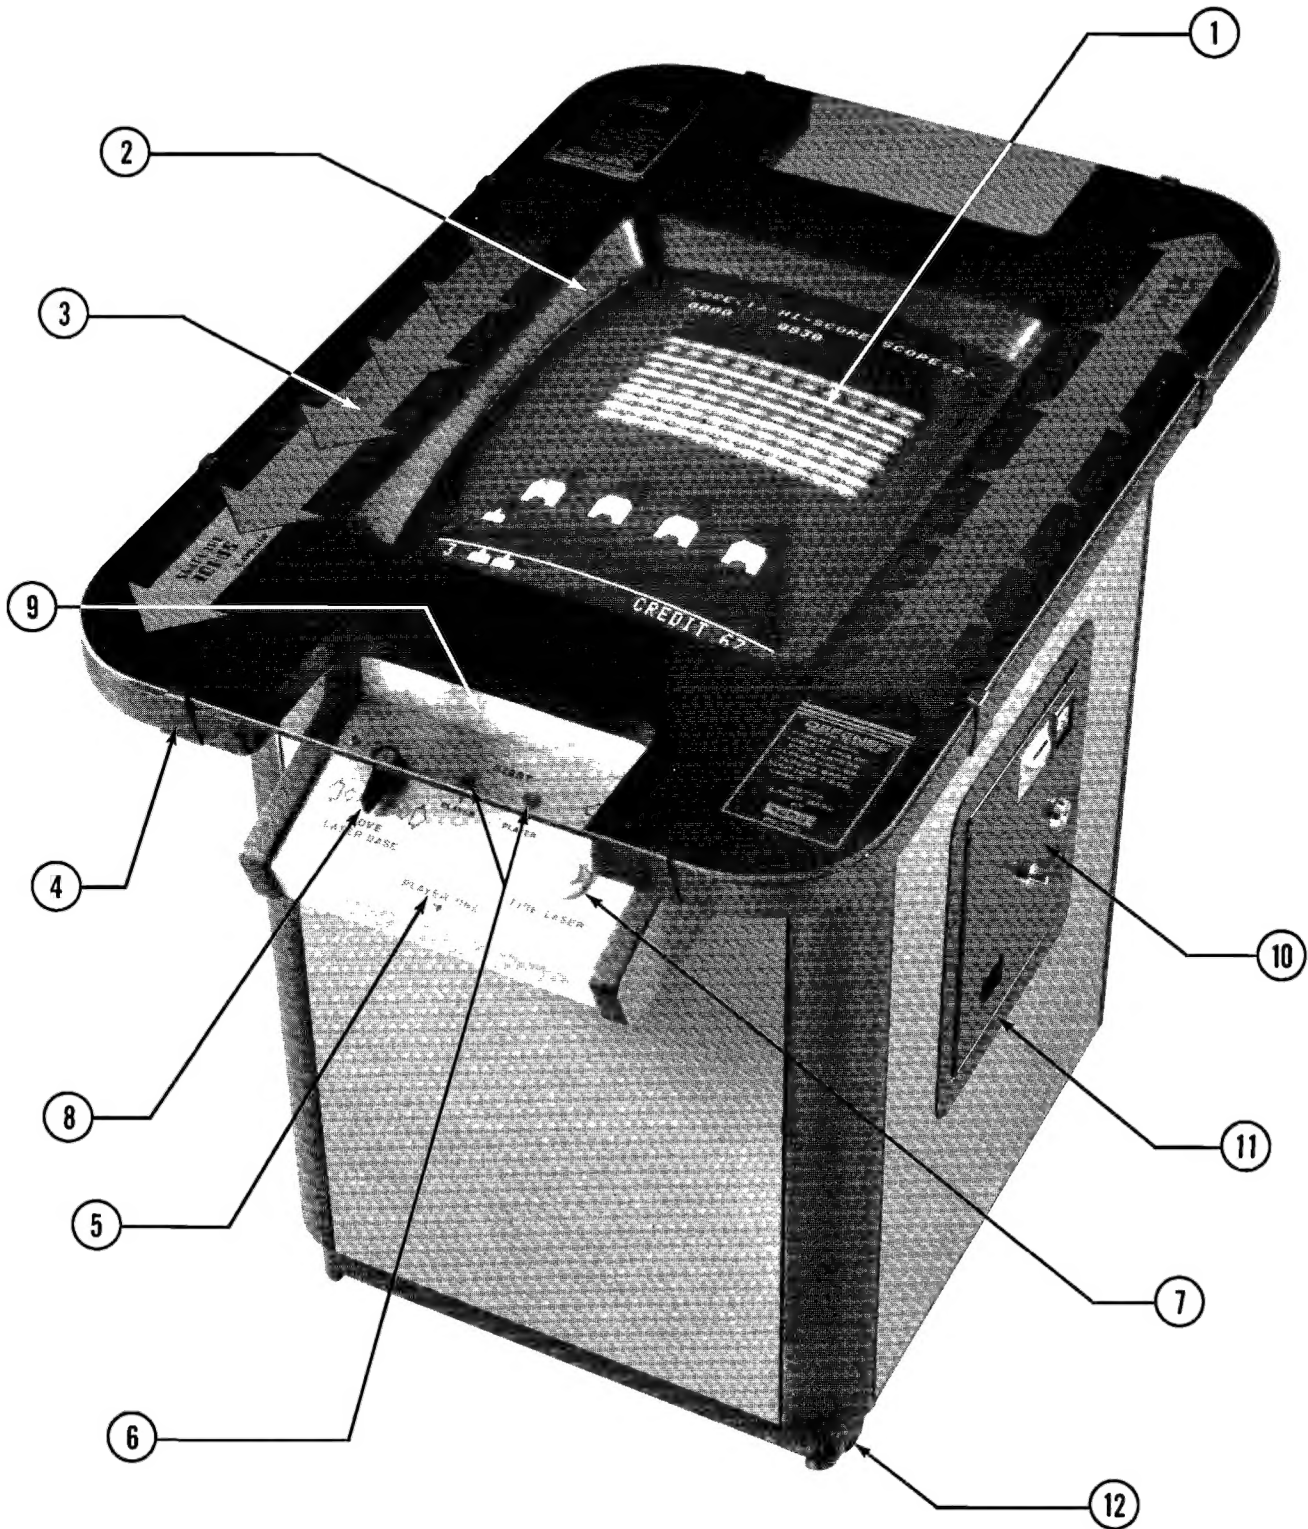

NO. 775 – SPACE INVADERS COCKTAIL – PICTURE

ORDER BY PART NUMBER ONLY

ITEM	PART NO	DESCRIPTION
1	0017-00003-0242	MONITOR W/CHASSIS - WELLS GARDNER
	0775-00111-00XF	TUBE BRKT. (4 REQ'D.)
	0017-00101-0082	#10 x 3/4 HEX HD. S.M.S. (8 REQ'D.)
2	0749-00901-0000	T.V. BEZEL
3	0775-00900-00XF	GLASS TOP
4	0775-00104-00XF	GLASS CLIPS (8 REQ'D.)
	0017-00101-0742	#8 x 1/2 PHL. TURSS HD. S.M.S. (16 REQ'D.)
5	0775-00106-00XF	ESCUTCHEON - MAIN
	0775-00107-00XF	ESCUTCHEON - R.H. (NOT SEEN)
	A775-00003-0000	SHELF PLATE ASSY. (2 REQ'D.)
6	0017-00032-0051	BUTTON SWITCH W/WASHER & NUT (2 REQ'D.)
7	A739-00017-0000	PUSH BUTTON ASSY. (2 REQ'D.)
	0586-00036-0000	PUSH BUTTON SW. (2 REQ'D.)
	0020-00202-0000	SWITCH PLATE (2 REQ'D.)
	0017-00101-0522	#5-40 x 7/16 RD. HD. M.S. (4 REQ'D.)
8	A775-00001-0000	KNOB & SHAFT ASSY. (2 REQ'D.)
	0017-00100-0050	"E" RING (4 REQ'D.)
	0775-00902-0000	ROLLER (2 REQ'D.)
	0775-00701-00XF	POST (2 REQ'D.)
	0017-00100-0015	"E" RING (2 REQ'D.)
	0017-00101-0720	#10-32 x 3/4 SOC. HD. CAP SCR. W/LOCKING DEVICE (NYLON) (2 REQ'D.)
	A775-00005-0000	SWITCH ASSY. (4 REQ'D.)
	0020-00240-0012	TENSION LEAF (4 REQ'D.)
	0020-00202-0000	SW. PLATE (4 REQ'D.)
	0017-00101-0525	#5-40 x 9/16 RD. HD. M.S. (8 REQ'D.)
9	0775-00901-0000	LIGHT SHIELD (2 REQ'D.)
	0775-00100-00XF	SHELF BRKT. (4 REQ'D.)
	0775-00112-00XF	BRKT. DECAL (2 REQ'D.)
	0017-00101-0017	#6 x 1/2 HEX HD. W/W. BLK. S.M.S. (4 REQ'D.)
	0017-00031-0006	LIGHT SOCKET (6 REQ'D.)
	0017-00003-0052	LAMP (6 REQ'D.)
	0017-00101-0014	#6 x 1/2 HEX HD. W/W. S.M.S. (10 REQ'D.)
10	A090-00058-0000	FRONT DOOR ASSY.
11	0090-00002-01BK	FRONT DOOR FRAME


NO. 775 – SPACE INVADERS COCKTAIL – PICTURE
ORDER BY PART NUMBER ONLY

ITEM	PART NO	DESCRIPTION
12	0017-00102-0048	LEG LEVELERS (4 REQ'D.)
	0017-00103-0026	LEG LEVELER NUTS (4 REQ'D.)
		<u>NOT SHOWN LIST</u>
		<u>FAN ASSY.</u>
	0017-00003-0222	FAN
	0775-00110-00XF	FAN PLATE
	0749-00106-00XF	VENT SCREEN
	0017-00101-0347	#6-32 x 1/2 PHIL. R.H. M.S. SEMS. (4 REQ'D.)
	0017-00104-0009	#6 EXT. WASHER (4 REQ'D.)
	0017-00103-0005	#6-32 HEX NUT (4 REQ'D.)
	0017-00101-0026	#8 x 5/8 SLOT. HEX HD. S.M.S. (4 REQ'D.)
		<u>SPEAKER ASSY.</u>
	0017-00003-0187	SPEAKER
	0017-00009-0393	SPEAKER GRILL
	0017-00101-0642	#8-32 x 1-1/2 CARRIAGE BOLTS (4 REQ'D.)
	0017-00103-0061	#8-32 HEX NUT SEMS. (12 REQ'D.)
	0017-00009-0393	VENT GRILL (2 REQ'D.)
	0017-00101-0639	#8-32 x 1-1/4 CARRIAGE BOLTS (8 REQ'D.)
	0017-00009-0033	BASSICK CLAMP (2 REQ'D.)
	0017-00101-0026	#8 x 5/8 HEX. HD. S.M.S. (4 REQ'D.)
	0610-00132-0000	STRIKE (2 REQ'D.)
	0017-00101-0028	#8 x 3/4 HEX HD. S.M.S. (4 REQ'D.)
	0017-00009-0439	HINGE (TOP ASSY.) (2 REQ'D.)
	0017-00101-0082	#10 x 3/4 HEX HD. S.M.S. (4 REQ'D.)
	0017-00101-0014	#6 x 7/8 OVAL HD. WD. SCR. (2 REQ'D.)
	0749-00105-00XF	PROP (SUPPORT)
	0017-00101-0082	#10 x 3/4 HEX HD. S.M.S.
	0017-00104-0038	3/4 x 1/4 x 1/16 STL. WASHER (2 REQ'D.)
	A749-00005-0000	INTERLOCK SWITCH ASSY.
	0017-00101-0026	#8 x 5/8 HEX HD. S.M.S. (3 REQ'D.)
	A627-00066-0000	ON-OFF SWITCH ASSY.
	0017-00101-0017	#6 x 1/2 HEX HD. S.M.S. (6 REQ'D.)


NO. 775 – SPACE INVADERS COCKTAIL – ADDITIONAL PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO	DESCRIPTION
	A749-00003-0000	CASH BOX ASSY.
	A627-00052-0000	CASH BOX COVER ASSY.
	0625-00117-0000	CASH BOX GUIDE
	A625-00024-0000	CASH BOX GUIDE BRKT. ASSY.
	0017-00101-0628	#8-32 x 3/4 CARRIAGE BOLTS (4 REQ'D.)
	0017-00103-0008	#8-32 HEX NUT (4 REQ'D.)
	A082-90400-H000	POWER SUPPLY ASSY.
	A749-00004-0000	TRANSFORMER BOARD ASSY.
	A084-90000-K739	MOTHER BOARD P.C. ASSY.
	A084-90700-D739	GAME BOARD P.C. ASSY.
	0624-00902-0100	P.C. SUPPORT BRKT. - 12" (4 REQ'D.)
	0624-00902-0500	P.C. SUPPORT BRKT. - 6-1/2"
	0624-00902-0400	P.C. SUPPORT BRKT. - 4" (4 REQ'D.)
	0017-00101-0028	#8 x 3/4 HEX HD. S.M.S. (22 REQ'D.)
	0017-00104-0037	3/4 x 3/16 x 1/16 STL. WASHER (22 REQ'D.)
	0017-00009-0419	PIN EXTRACTOR TOOL (PIN POPPER) (MO LAX JACKS ONLY)

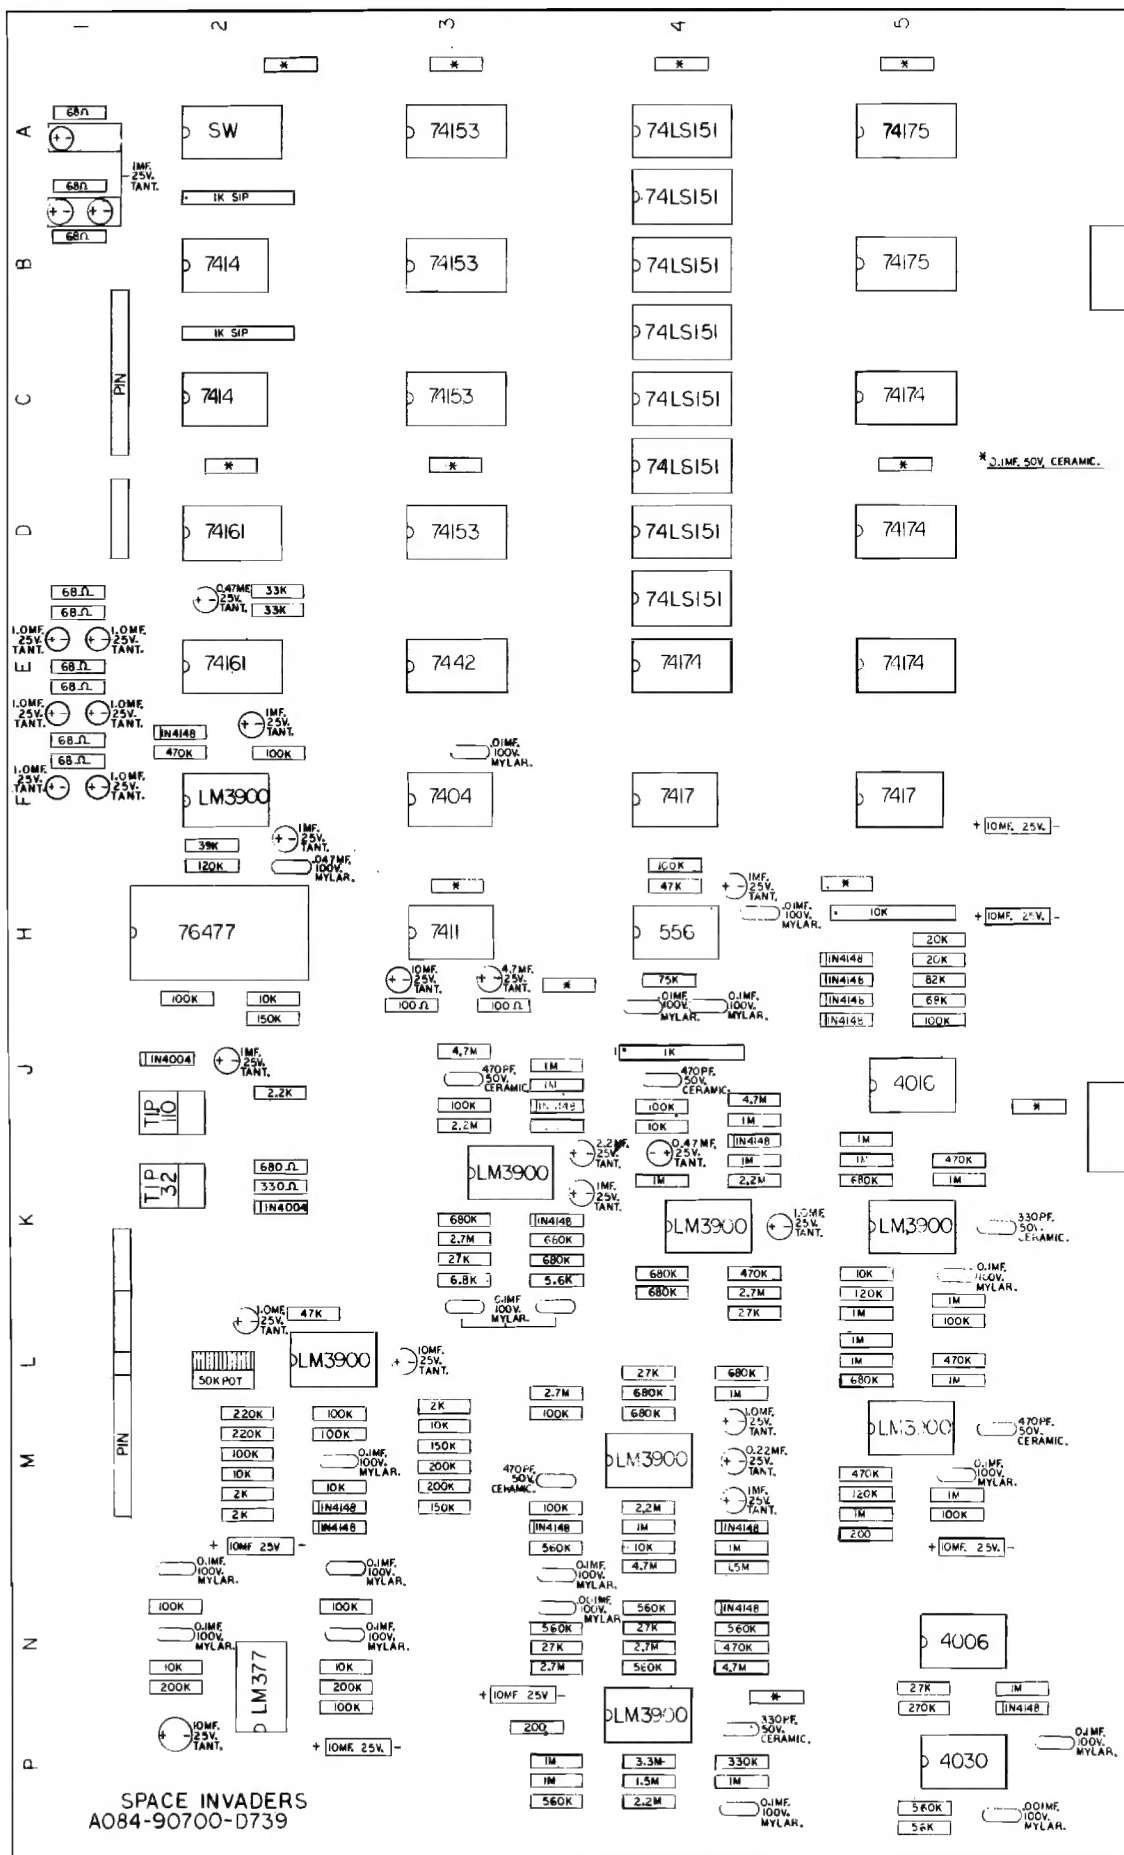

COMPONENT LAYOUT, PART NO. M051-00775-A004
COCKTAIL TABLE MODEL

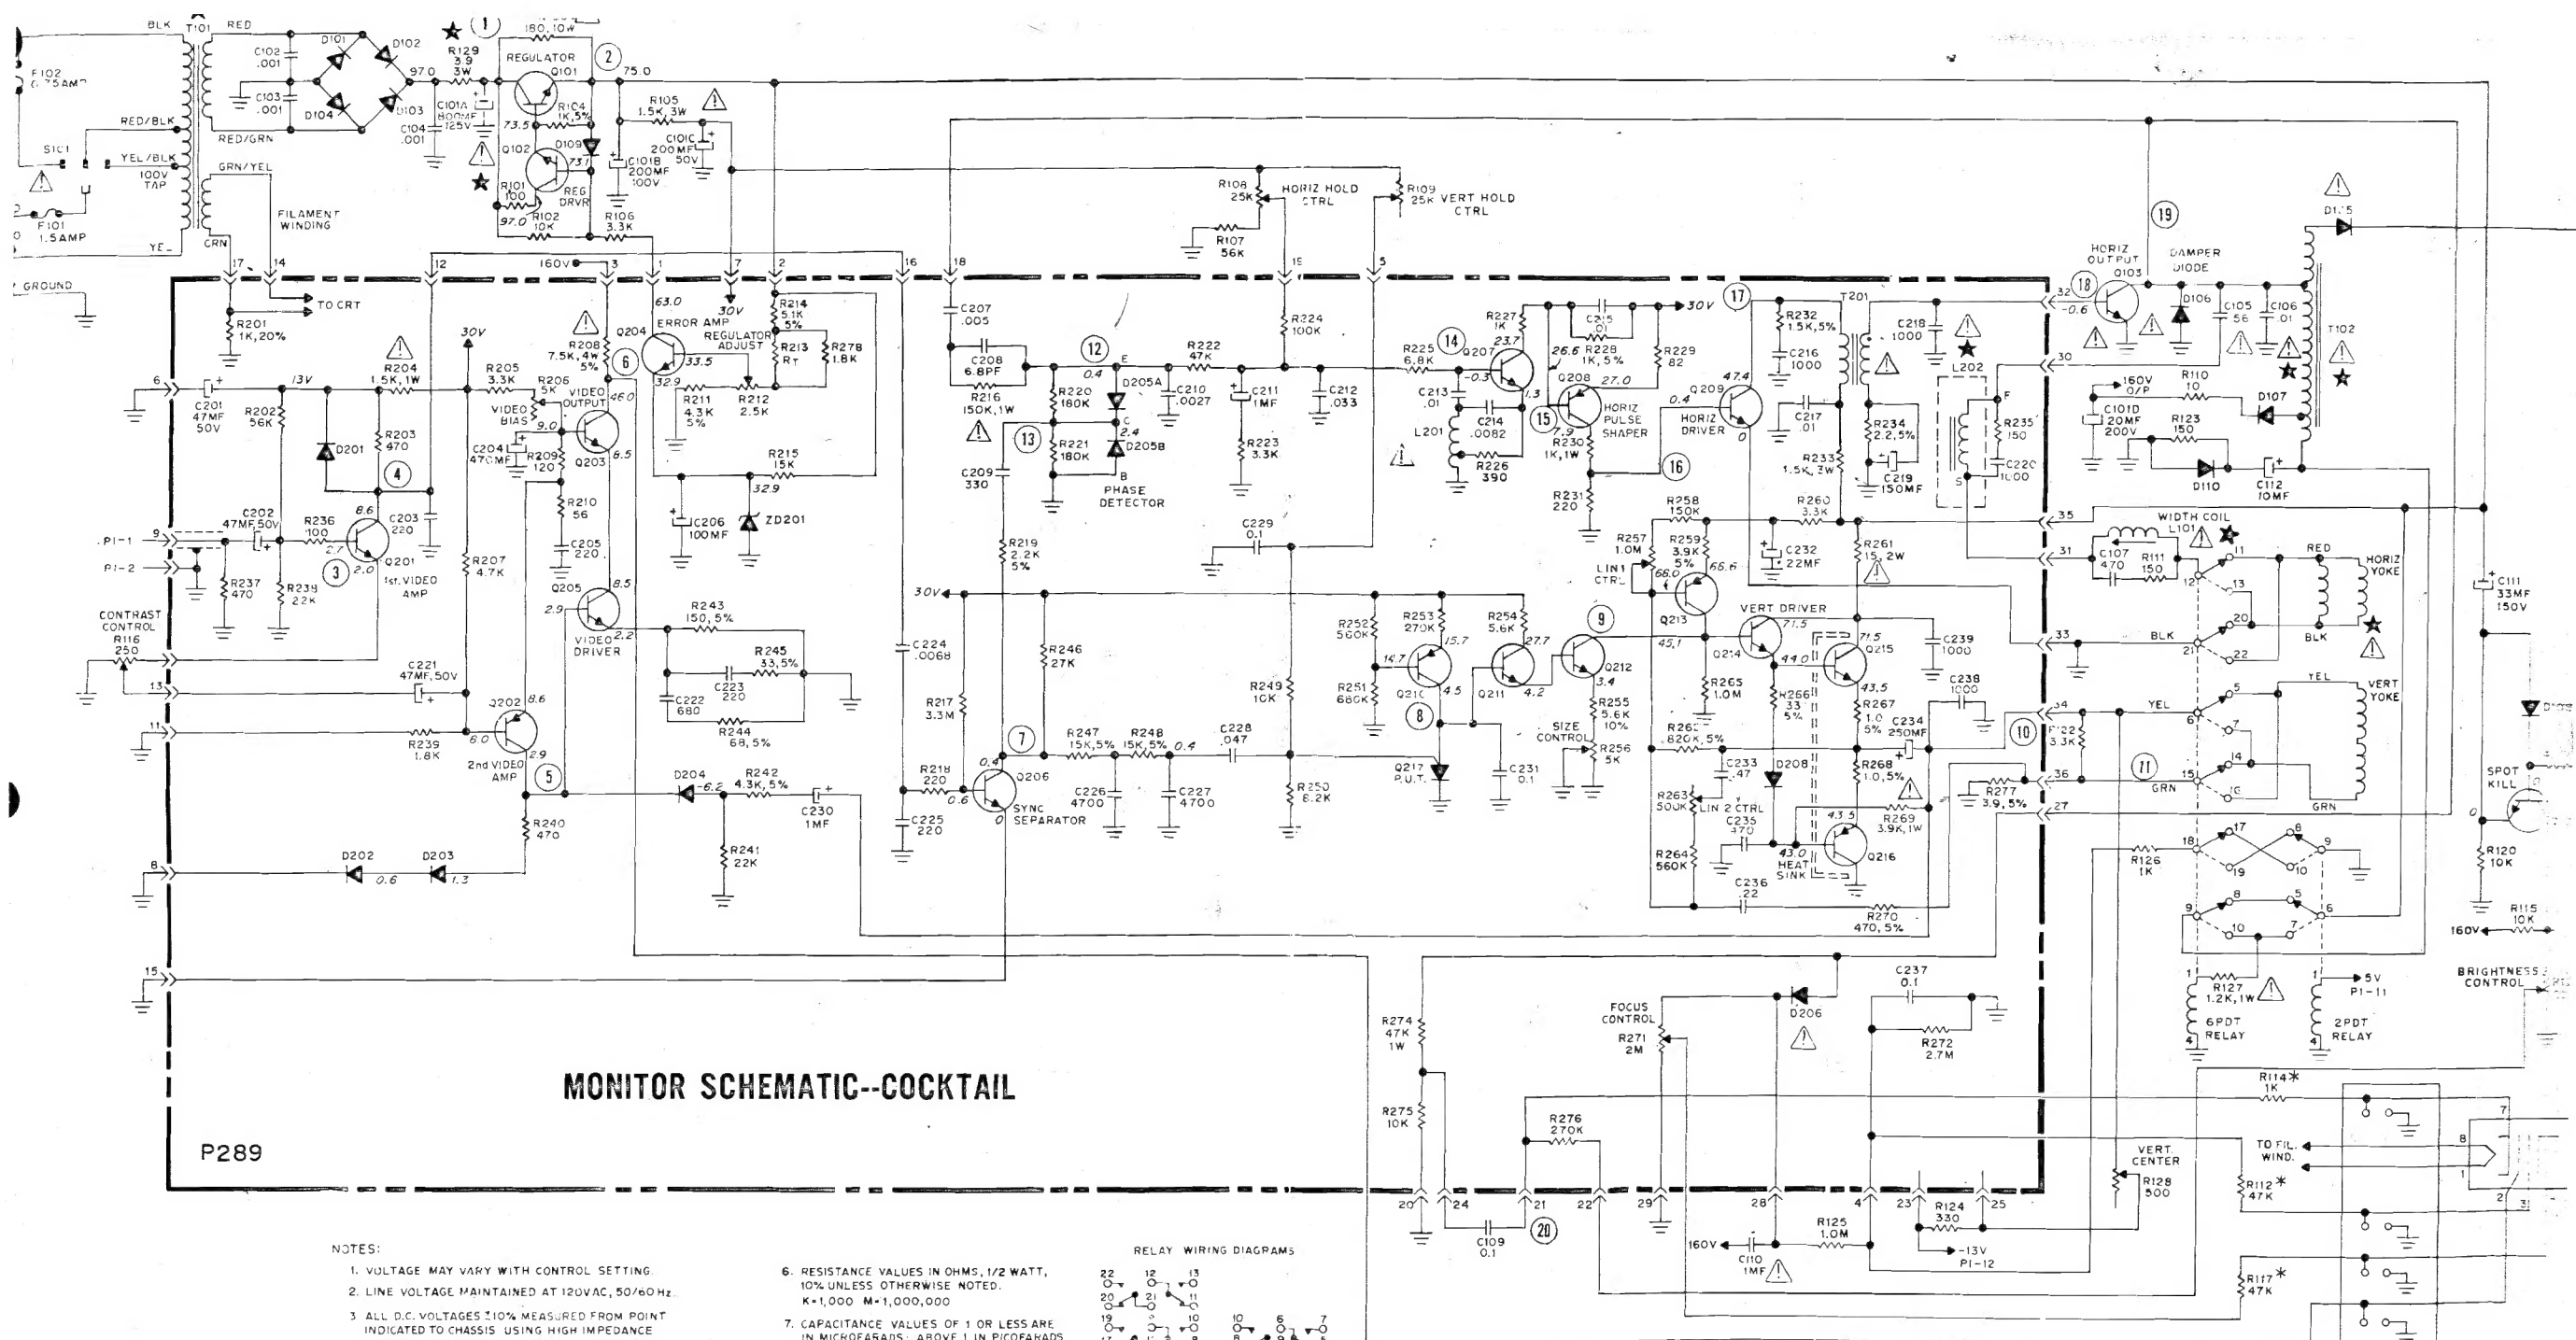

MONITOR SCHEMATIC--COCKTAIL


P289

NOTES:

1. VOLTAGE MAY VARY WITH CONTROL SETTING
2. LINE VOLTAGE MAINTAINED AT 120VAC, 50/60Hz.
3. ALL D.C. VOLTAGES $\pm 10\%$ MEASURED FROM POINT INDICATED TO CHASSIS USING HIGH IMPEDANCE METER WITH NO SIGNAL INPUT. CONTRAST AND BRIGHTNESS CONTROLS AT MAXIMUM, ALL OTHER CONTROLS IN NORMAL OPERATING POSITION.
4. WITH INTERNAL NUMBER INDICATES LOCATION OF WAVE FORM READING.
5. * - INDICATES RESISTORS LOCATED IN PICTURE TUBE LEAD ASSEMBLY.

6. RESISTANCE VALUES IN OHMS, 1/2 WATT, 10% UNLESS OTHERWISE NOTED. K=1,000 M=1,000,000
7. CAPACITANCE VALUES OF 1 OR LESS ARE IN MICROFARADS; ABOVE 1 IN PICOFARADS UNLESS OTHERWISE NOTED.
8. PRODUCT SAFETY NOTICE: PARTS IDENTIFIED BY SHADING ARE SAFETY CRITICAL COMPONENTS. REPLACE ONLY WITH SAME TYPE PARTS SHOWN IN PARTS LIST.

RELAY WIRING DIAGRAMS

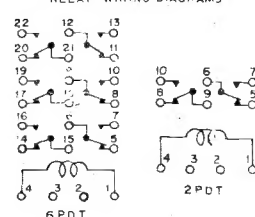

PRODUCT SAFETY NOTICE:

- PARTS IDENTIFIED BY SHADING AND BY ARE SAFETY CRITICAL COMPONENTS. REPLACE ONLY WITH SAME TYPE PARTS SHOWN IN PARTS LISTS.
- X-RAY RADIATION RELATED PARTS FOR REPLACEMENT PURPOSES, USE ONLY TYPE PARTS SHOWN IN PARTS LIST.

